



"Universal Holder"

INSTALLATION INSTRUCTIONS

Item No.: 710620

"Universal Holder"
(stick-on button and V-slot plate)

Please read all of the instructions and look at the pictures before attaching the Holder.

ProClip USA may not be held liable for any damage to a vehicle before, during or after the installation or removal of this "Universal Holder".

ProClip USA may not be held liable for any personal injury resulting from accident or improper use or installation.

Overview Picture



Note: The Stick-On Button can be attached to any flat surface or slightly curved surface i.e. back of cell phone, PDA, Remote Control, Cordless Phone, MP3 Player etc.

1.

Clean the surface on the back of your device where you are about to attach the Stick-On Button with the enclosed alcohol pad. (The smallest amount of oil or dirt will affect proper bonding. Surface temperature of the item should be above 60F/15C). Peel off the cover on the adhesive tape on the Stick-On Button. Hold it in your hand so the round knob is at the top.



2.

Place the sticky side onto the back of your device (i.e. cell phone in the picture). Press the Stick-On Button firmly to the device for approx 60 sec. for best possible attachment.



3.

Place the Wall Plate onto the ProClip dash mount (or any other mount or flat surface) so the holes match and screw the plate to the ProClip dash mount using the enclosed screws.



3.

Slide the device with the Stick-On Button down into the V-groove in the Wall Plate. Note: The round knob on the Stick-On Button has a cut on each side so when slid into the V-groove it will not swivel back and forth but keep an upright and sturdy position. Your device is now in place as shown in the overview picture above.

