



Item No.: 215083
Handlebar Mount with Tilt Swivel
(for round handlebars)

Installation Instruction


Overview Picture

Please read all of the instructions and look at the pictures before attaching the ProClip.

ProClip USA may not be held liable for any damage to a vehicle before, during or after the installation or removal of this dashboard mount.

ProClip USA may not be held liable for any personal injury resulting from accident or improper use or installation.


The ProClip mount in the installation pictures may look slightly different from the one you have received. However, the same instructions apply.

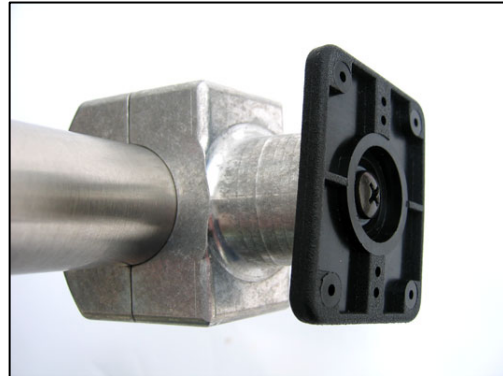

1.
With the hex wrench (provided) unscrew and remove the two hex bolts. Then separate the two sections of the metal handlebar clamp.



2.
Place the two sections of the metal handlebar clamp into position around the handlebar.

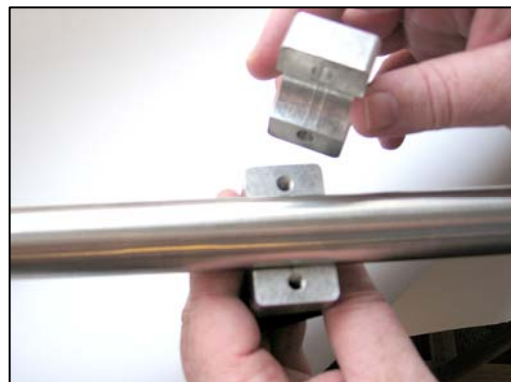

3.
Replace the hex bolts and with the hex wrench (provided) tighten the two hex bolts (make sure the mount is in place before you clamp firmly around the handlebar).

The ProClip Handlebar Mount is now in place as shown in the overview picture above.

