



Dashboard Mount

INSTALLATION INSTRUCTIONS

Item No.: 852676
Angled Mount

Audi TT, 2000-2007 (US)
Audi TT, 1999-2006 (EU)

Please read all of the instructions and look at the pictures before attaching the ProClip.

ProClip USA may not be held liable for any damage to a vehicle before, during or after the installation or removal of this dashboard mount.

ProClip USA may not be held liable for any personal injury resulting from accident or improper use or installation.

The ProClip mount in the installation pictures may look slightly different from the one you have received. However, the same instructions apply.


Overview Picture



1.
Peel off the cover of adhesive tape on the ProClip. Place it in your hand so the ProClip label (sticker) is in an upright position, or if vertically positioned; the P in the beginning of ProClip is at the top.
Place the ProClip over the padded part.



2.
Press down on top of the ProClip towards the floor until the angled edge on the left side of the ProClip hooks under the padded edge.

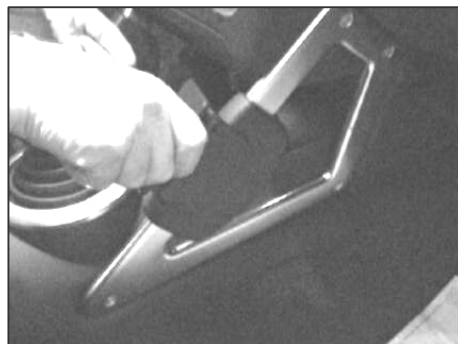

3.
The ProClip is now in place as shown in the overview picture above.

