



Item No.: 854046  
Angled Mount



Mini Cooper, 2007-Current  
Mini Cooper Convertible, 2008-Current  
Mini Cooper Clubman, 2008-Current

ONLY for models that can open the compartment next to the right air vent. Push on the door to open it

## Installation Instruction

**Please read all of the instructions and look at the pictures before attaching the ProClip.**

**ProClip USA** may not be held liable for any damage to a vehicle before, during or after the installation or removal of this dashboard mount.

**ProClip USA** may not be held liable for any personal injury resulting from accident or improper use or installation.

**The ProClip** mount in the installation pictures may look slightly different from the one you have received. However, the same instructions apply.

## Overview Picture



**Note:** DO NOT attach anything to this mount until after you have attached the mount to the dashboard. If you do, you will make it more difficult to attach the mount, and by screwing into it, it is then considered used and therefore non-refundable. See terms on back. The adhesive tape referred to below does not leave any marks or damage the dashboard, and it is easy to remove.


1.

Open the top compartment next to the right air vent. Press the thin end of the enclosed gap opener into the gap between the dashboard ledge and the panel frame below the air vent, to widen it. (See arrow in image)




2.

Peel off the cover of adhesive tape on the ProClip. Place it in your hand so the ProClip label (sticker) is in an upright position, or if vertically positioned; the P in ProClip is at the top. Press the curved edge on the upper part of the ProClip into the gap next to the gap opener. Press until you see or hear/feel it snaps into place.

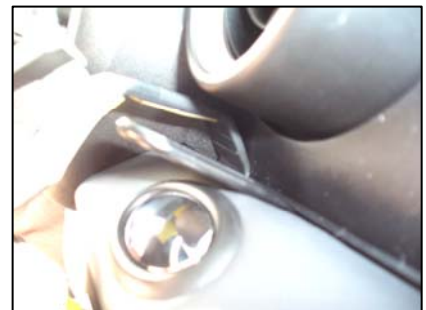

3.

Slide the ProClip all the way to the left.

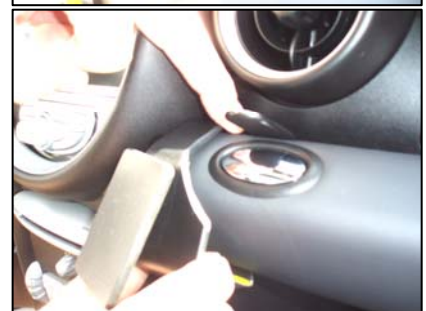

Open the glove compartment.

3.

Press firmly forward on the lower part of the ProClip so the angled edge hooks around the dashboard edge by the glove compartment. Close the glove compartment and the top compartment.

The ProClip is now in place as shown in the overview picture above.

