



Item No.: 215162

## Vehicle Mount Adapter 10° Angle

### Installation Instruction


### Overview Picture

Please read all of the instructions and look at the pictures before attaching the ProClip.

**ProClip USA** may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Adapter.

**ProClip USA** may not be held liable for any personal injury resulting from accident or improper use or installation.

The **ProClip** Adapter in the installation pictures may look slightly different from the one you have received. However, the same instructions apply.

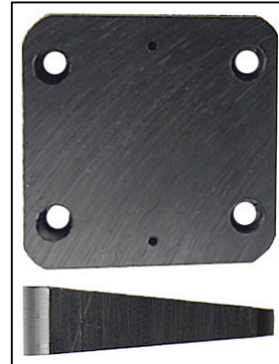

**Note:** The Adapter can be attached to any mounting bracket or flat surface with the applicable screws enclosed - self-tapping screws if the mount has small holes or machine screws with nuts if the mount has large holes.

1.  
Place the adapter plate over the matching holes in your mounting bracket (ProClip mount shown in picture) Attach the adapter plate by using the applicable screws enclosed – self-tapping screws if the mount has small holes or machine screws with nuts if the mount has large holes.

2.  
**If you have a Standard Holder:**  
Press a screwdriver (Philips) firmly through the predrilled holes in Part 2 to open them up. Place the Holder over the matching holes in adapter plate and attach it by using the applicable screws enclosed – self-tapping screws if the mount has small holes or machine screws with nuts if the mount has large holes.

3.  
**If you have a Holder with Tilt Swivel:**  
Unscrew the screw in the center of the Holder and remove the holder from the Tilt Swivel base plate. Place the Tilt Swivel base plate over the matching holes in your mounting bracket. Attach the base plate by using the applicable screws enclosed – self-tapping screws if the mount has small holes or machine screws with nuts if the mount has large holes.

4.  
Place the Holder onto the Tilt Swivel base plate and attach it with the center screw. This screw also controls the pivot, tighter for a firm hold and loose for more (easier) movement/angling of the holder.

